

Self-Contained Carpet Extractor OPERATORS MANUAL AND PARTS LIST Model PFX900S

OPERATING INSTRUCTIONS

COMMERCIAL AND HOUSEHOLD SELF CONTAINED EXTRACTOR

CONGRATULATIONS

YOU HAVE JUST ACQUIRED A HIGH QUALITY SELF CONTAINED EXTRACTOR. PLEASE READ THIS MANUAL CAREFULLY, BEFORE OPERATING YOUR NEW SELF CONTAINED EXTRACTOR. KEEP MANUAL ON HAND FOR FURTHER REFERENCES.





WARNING: OPERATOR MUST READ AND UNDERSTAND THIS MANUAL COMPLETELY BEFORE OPERATING THIS EQUIPMENT.

READ ALL INSTRUCTIONS BEFORE USING!

Congratulations on purchasing a Powr-Flite self-contained extractor. Given proper care, this product will afford you many years of trouble-free operation. All parts have passed rigid quality control standards before being assembled to produce the finished product.

Prior to packaging, the extractor is again inspected for assurance of flawless assembly. This unit is protectively packed to prevent damage in shipment. We recommend removal and inspection of unit upon delivery for possible damage in transit. Only a visual examination will reveal damage that may have occurred. If damage is discovered, immediately notify the transportation company that delivered your extractor. As a shipper, we are unable to report claims for concealed damage. You must originate any claim within 5 days of delivery.

This manual is for your protection and information. **PLEASE READ CAREFULLY** since failure to follow precautions could result in discomfort or injury. When using electrical equipment, basic safety precautions should always be followed.

TABLE OF CONTENTS
INTRODUCTION2SAFETY PRECAUTIONS (English)3GROUNDING INSTRUCTIONS4SAFETY PRECAUTIONS (Spanish) (French)5GENERAL INSTRUCTIONS6,7Machine Components6Machine Operation6Pre-operation Checks6Cleaning Procedure (accessories)7Storage7Routine Care & Maintenance7ILLUSTRATED PARTS LIST8-11MAINTENANCE GUIDE12

CARE OF THIS SELF-CONTAINED EXTRACTOR


Treat this unit as you would any other high grade precision made product. Dropping, unreasonable bumping across thresholds and other misuses may result in a damaged unit which will not be covered by warranty. When not in use, power cord should be wrapped around handle for storage. Read this manual completely before operating this extractor. It is important to follow instructions in this manual to prevent the possibility of injury or damage to the user and/or machine.

DANGER: Improper use of the grounding plug can result in a risk of electric shock.

GROUNDING INSTRUCTIONS

This extractor must be properly grounded. If it should malfunction or breakdown, grounding provides a path of least resistance for electrical current to reduce the risk of electric shock. This machine is equipped with 1 or 2 pigtail cords having an equipment-grounding conductor and grounding plug. The pigtails must be inserted into an appropriate 12 gauge 3 prong extension cord.

GROUNDING METHODS

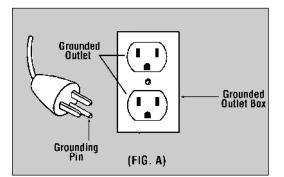

This unit is for use on a nominal 120 volt circuit and has a grounded plug that looks like the plug illustrated in (Fig. A).

WARNING!

Improper connection of the equipment-grounding conductor can result in a risk of electric shock. Check with a qualified electrician or service person if you are in doubt as to whether the outlet is properly grounded. DO NOT modify the plug provided with the appliance. If it will not fit the outlet, have a proper outlet installed by a qualified electrician.

NOTE: In Canada, the use of a temporary adapter is not permitted by the Canadian Electrical Code.

IMPORTANT SAFETY PRECAUTIONS

WARNING!: To reduce the risk of fire, electric shock, or injury

WARNING To avoid fire, DO NOT use with a flammable or combustible liquid to clean floor.



WARNING To avoid electric shock, DO NOT expose to rain. Store Indoors.

When using this self contained extractor, basic precautions should always be followed, including the following:

- 1) DO NOT leave unit when plugged in. Unplug from outlet when not in use and before servicing.
- 2) DO NOT allow unit to be used as a toy. Close attention is necessary when used around or near children.
- 3) Use only as described in this manual. Use only manufacturer's recommended attachments.
- 4) DO NOT use with damaged cord or plug. If unit is not working properly because it has been dropped, dropped into water, left outdoors, or damaged in any way, contact a service center of Powr-Flite®.
- 5) DO NOT pull or carry by cord, use cord as a handle, close door on cord, or pull cord around sharp edges or corners. DO NOT run unit over cord. Keep cord away from heated surfaces.
- 6) DO NOT unplug by pulling on cord. To unplug, grasp the plug, not the cord.
- 7) DO NOT handle plug or appliance with wet hands.
- DO NOT put any objects into openings. DO NOT use with any opening blocked: keep free of dust, lint, hair, or anything that may reduce air flow.
- 9) Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.

- 10) DO NOT pick up anything that is smoking or burning such as cigarettes, matches, or hot ashes.
- 11) DO NOT use to pick up hazardous chemicals.
- 12) Turn off all controls before unplugging.
- Turn unit off immediately if foam or liquid comes from machine exhaust. Empty and clean out recovery (dirty) tank and use defoamer to correct the problem.
- 14) DO NOT use to pick up flammable or combustible liquids such as gasoline or use in areas where they may be present.
- 15) DO NOT use where oxygen or anesthetics are used.
- 16) Extension cord must be a three-wire type, 14 guage or larger, to ensure grounding protection.
- 17) Replace damaged or worn parts immediately with genuine original equipment parts to maintain safety.
- 18) This unit must be connected to a properly grounded outlet only. See grounding instruction.

Ω
M
릂
١ ا
EG
S
ä
St
M
ā
闄

PELIGROI: Para reducar el riesgo de incendio, descarga electrica o daño:

NO SE exponga a la lluvia a guarde bajo techo. Una sacudida electrica puede suceder sí se usa en superficies humedas.

NO utilize la unidad para levantar liquidos flamables o combustibles como gasolina.

PARA SU SEGURIDAD

- NO DEJE la aspiradora enchufada. Desconectela cuando no la use y antes de darle servicio.
- NO PERMITE que se use como juguete. Ponga attencion cuando se use cerca de niños.
- 3) USE SE SOLAMENTE de acuerdo a las instrucciones y con accesorios recomendados por el fabricante.
- 4) NO USE con el cable o clavija dañados. Si la unidad ha sido golpeada, mojada, o dañada enalgun modo llame al centro de servicio o Powr-Filte[].

- 5 -

 
- 5) NO JALE o carque del cable, no machuque el cable o lo estire sobre objetos filosos. NO USE la unidad sobre el cable.
- 6) NO DESENCHUFE jalando el cable. Para hacerlo jale de la clavija no del cable.
- NO TOME la clavija o el aparato con las manos mojadas.
- 8) NO TAPE objetos en las ventilas. NO USE si alguna está tapada. Mantenga limpia de polvo, peluza o cualquier obstrucción.
- Mantenga el pelo, ropa suelta manos y partes del cuerpo lejos de las aberturas y partes móviles.
- NUNCA aspire objetos que mandose o humeando como cigarros, cerillos o cenizas calientes.

- No use unidad a recoje materiales peligrosas.
- 12) Apajue todos los controles antes de desconectar.
- 13) Paga las unidad immediamente si hay espuma o liquidos saliendo da bajo de la unidad. Si esto para limpia e tranqué y también usa un chemico de espuma.
- 14) NO UTILIZE la unidad para levantar liquidos flamables o combustibles como gasolina; o use en areas dande se encuentren estos liquidos.
- Replacen los partes gastadas o dañadas immediamente para mentener la seguridad.
- 16) Esta unidad debe ser conectada a un enchufe correctamente aterrezado solamente. Vea los instructiones de terra. Sís a sapiradora/soplador tiene un enchufe para una boquilla de potencia, apaguela siempre antes de conector o desconector la goquilla.
- NO USE donde oxigeno o anestesicos sean empleados.
- IS) NO USE extensión electrica mas que cuando sea absolutamente necesario. Si usa extensión, el cable debe de ser calibre #14 o mayor yn o debe exceder 50 pies de longitud. El cable extensión debe ser de 3 polos para asegurar protection de tierta.

INSTRUCCIONES DE TIERRA

IPELIGRO

Una coneccion incorrecta de tierra puede resultar en una descarga electrica. Consulte con un electricista calificado o persona de servicio si tiene duda acerca del enchufe y su tierra. No modifique el enchufe de las unidad. Si no encaja en el enchufe, haga instalar un enchufe apropiado por un electricista calificado.



IMPORTANTES MESURES DE SÉCURITÉ

AVERTISSMENTI: Pour reduire les risques d'incendie, de choc electrique ou de blessure:

NE PAS aspire de maitiéres humides. Ne pas exposer à l'intérieur.



NE PAS utiliser l'appareil avec des liquides inflammables en aspirant afin d'éviter du feu.

POUR VOTRE SÉCURITÉ

- NE PAS laisser l'appareil sans surveillance lorsqu'il est branché. Débrancher lorsque l'appareil n'est pas utilisse ét avant l'entretien.
- 2) NE PAS permettre aux enfants de jouer avec l'appareil. Une attention particulière est nécessaire lorsque l'appareil est utilisé par des enfants ou à proximité de ces demiers.
- N'utiliser que conformément à cette notice avec les accessoires recommandés par le fabricant.
- 4) NE PAS utiliser si le cordon ou la fiche est endommage. Retourner l'appareil à un atelier de réparation s'il ne fonctionne pas bien, s'il est tombé ou s'il a été endommage, oublié à l'extérieur ou immergé.
- 5) NE PAS tirer, soulever ou traîner l'appareil par le cordon. NE PAS utiliser le cordon comme une poignée, le concer dans l'embrasure d'une porte ou l'appuyer contre des arêtes vives ou des cortos. NE PAS faire router l'appareil sur le cordon. Garder le cordon à l'écarte des surfaces chaudes.
- 6) NE PAS débrancher en tirant sur le cordon. Tirer plutôt la fiche.
- NE PAS toucher la fiche ou l'appareil lorsque vos mains sont humides.
- NE PAS utiliser des rallonges ou des prises qui n'ont pas de capacité suffisante pour transporter le courant.
- NE PAS utiliser où l'oxygène ou les gazes sont utilisés.

INSTRUCTIONS VISANT LA MISE À LA TERRE

 
NER LISSMENT &

Un conducteur de terre mal raccordé peut entraîner un risque de choc électrique. Consulter un électricien ou un technicien d'entretten qualifié si vous n'êtes pas uratain que la prise soit correctement mise à lat terre. Ne pas modifier la fiche fournie avec l'appareil-se elle ne peur être inséreé dans la prise, faire installer une prise adéquate par un electricien qualifié.



- Maintenir les cheveux, les vêtements amples, le doigts et toutes les parties du corps à l'écart des ouvertures et des pièces mobiles.
- 12) NE PAS aspirer de matières en combusion ou qui dégagent de la fumée, comme des cigarettes, des allumettes oiu des cendres chaudes.
- NE PAS utiliser l'aspirateur pour soulever les produits chimiques dangereux.
- 14) Mettre toutes les commandes à la position ARRÊT avant dé debrancher l'appareil.
- 15) Couper le courant immédiatement si le liquide de nettoyage sort de l'appareil. Videz et nettoyez le réservoir interim et admettez le liquide de nulle écume.
- 16) NE PAS aspirer des liquides inflammables ou combusibles, comme de l'essence, et ne pas faire fonctionner dans des endroits où peuvent se trouver de tels liquides.
- 17) Replacez taré parties vite à maintenir sécurité.
- 18) Ne brancher qu'à une prise de courant avec mise à la terre. Voir les instructions visant la mise à la terre.

é peut entraîner un



GENERAL INSTRUCTIONS

PRE-OPERATION INSTRUCTIONS for PFX900S

NOTE: (color fastness) Before using carpet cleaning chemicals, test on an inconspicuous part of the carpet for color fastness. Place the solution on a small piece of clean white material or tissue, then rub the carpet vigorously. Excessive amounts of dye showing on the material would indicate that the colors are not fast, and should not be wet cleaned.

- 1) Fill the solution tank with 9 gallons of warm water. **WARNING:** DO NOT overfill.
- 2) Measure carpet cleaning solution per manufacturers recommended ratio into the clean water tank. DO NOT use the waste tank to fill the solution tank as debris could damage the pump or block the jet. WARNING: DO NOT exceed 150° (65° C)
- **3)** Add defoamer solution per manufacturer's instructions as needed.



OPERATION OF SELF-CONTAINED CARPET CLEANER

- 1) Plug main power cable into outlet. WARNING: This machine must be properly grounded.
- 2) Press the Vac switch to the ON position. Then press the pump switch ON and the brush switch to the ON position.
- **3)** Lower carpet brush. Push brush lowering pedal forward to lower brush. Push down and back to raise bush.
- 4) Press and hold the solution switch to apply the cleaning solution. Pull the machine backwards at the same time to clean the carpet. Stop the solution spray about 12" (30cm) before the end so all of the solution is vacuumed up. Slightly overlap the next cleaning pass to prevent streaking. A two (2) wet pass maximum is recommended to avoid overwetting. After a few passes, check the waste tank to see that no foam is present. Add extra defoamer if necessary.
- 5) Make sure to empty the recovery (top) tank when it is approximately 3/4 full. Do not refill the solution tank without emptying all the contents of the recovery tank first.



GENERAL INSTRUCTIONS

STORAGE

WHEN CLEANING IS FINISHED:

- Connect the drain solution hose (gray hose with brass connector) to the solution fitting at the front of the machine and place the other end at drain. Turn on the PUMP switch. This will pump the remaining solution into the waste tank for easy drainage.
- 2) To disconnect the solution hose, push in on the ring of the solution filling. Switch off the machine, remove power plug from the socket, and empty the waste tank. Leave waste tank open when storing.
- **3)** Leave brush raised for storage.

ACCESSORIES / TOOLS (OPTIONAL)

For upholstery cleaning and inaccessible areas. Attach recovery hose to recovery hose position of vacuum shoe. Connect the accessory solution hose to the solution fitting at the front of the machine by pushing back the locking ring to fit. Turn on vacuum and pump.

g e Brush adjustment pedal



Tank drain hose

ROUTINE MAINTENANCE INSTRUCTIONS

DAILY / INTERVAL

- 1) Check the spray jet for blockage and a uniform spray pattern. Remove jet and blow through to clean. Do not use a pin as this may cause damage to the jet.
- 2) Check and remove any debris or lint build-up from the vacuum head, brush, and brush housing.
- 3) Always wash out the tanks with clean water after use. To do this, pour clean water into the solution tank and spray through spray tip to clear chemical residue from the pump, lines, and spray tip. Allow the vacuum to run for a few minutes after use to aid the machine in drying out and to help prevent bacteria and odors.


WEEKLY


1) Inspect hoses (unseen blockages sometimes occur), hose cuffs, and the rubber seal on the recovery tank lid. The main cable, plug, and switches should also be examined for damage.

NOTE: It is advisable to store the unit with the recovery tank lid removed.

CAUTION: THIS UNIT MUST BE PROTECTED FROM FREEZING. Damage from freezing could cause machine to malfunction.

SELF-CONTAINED EXTRACTOR PFX900S PARTS

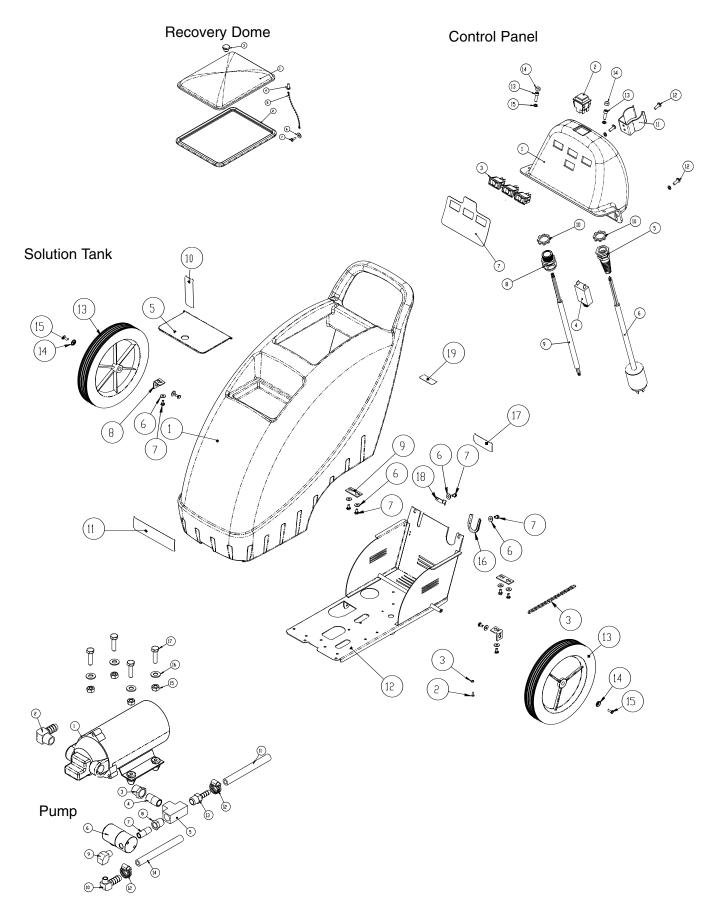

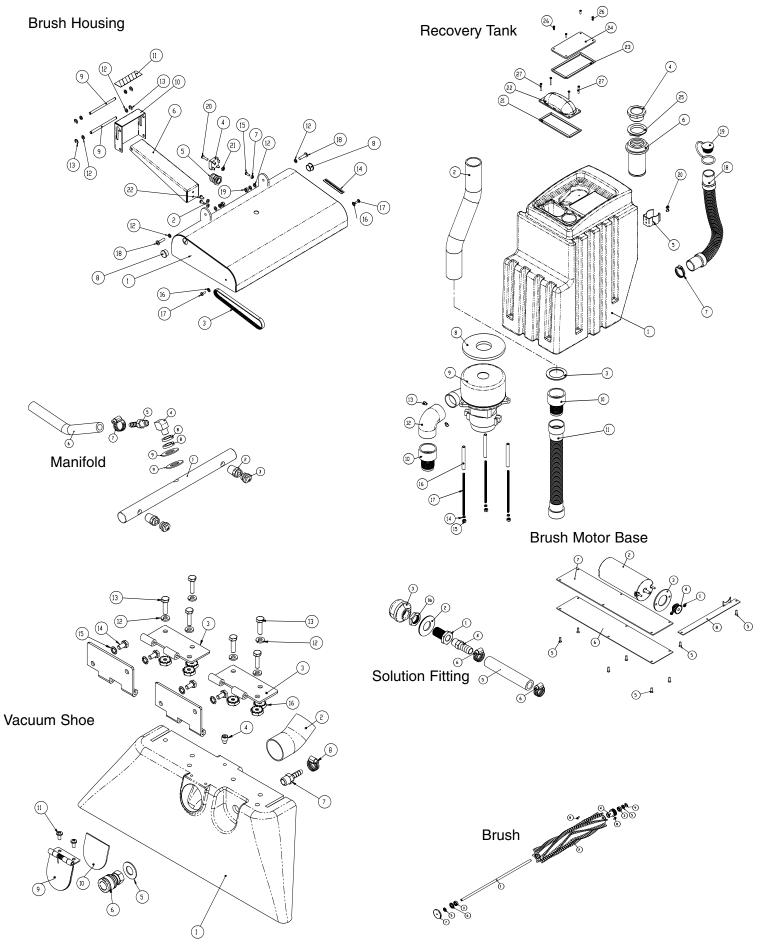

SELF-CONTAINED EXTRACTOR PFX900S PARTS

USH.		description	12	order# 7DL003	description
0011	HOUSING :	have been a supplement	13	7AT003	clamp
	X9015	brush housing weldment			hose barb
	7BF008	nut	14	X8542	hose, solution
	X9004	brush drive belt	15	X8237	nu
	X9003	bridge rectifier	16	X8858	washer
	X8055	strain relief	17	X8211	bolt
	X9107	brush lift bracket			
	X8256	nut	RECOV	ERY DOME:	
	72142A	plug, 7/8" black nylon	1	X9034	recovery tank dome
	X9030	foot pedal pin	2 3	X9124	recovery dome gasket
	X9026	brush lift pedal	3	X9110	knob, large dome li
	X9122		4	X9098	screw
		safety walk tape, 1" wide, black	5	X9068	chain
	72241A	washer	6	7CM003	washe
	X9114	e-ring	7	X8849	screw
	X9128	label	<u>′</u>	70043	30100
	7BS002	screw	DECOV	ERY TANK:	
	7CY001	washer	I I	X9041	recovery tank housing, blue
	71651A	screw	 		
	7CW003	screw	2	X9129	vacuum stack assembl
	X8237	nut	3	<u>PX14A</u>	gasket
	7BR005	SCREW	4	X9075	bushing
	X8830	nut	5	72173A	spring cli
			6	X9053	float cage
	7BH004	screw	7	7DL005	clam
			8	X9120-1	vacuum motor gasket
ISH	MOTOR BASE:		9	72365A	3-stage vacuum moto
	X8830	nut	10	PX65	fitting, plastic
	X9002	motor, 120V DC	11	X9092	vac hose w/cuff
	X9119	motor, 220V DC - for 220v model only	12	PX11A	fitting, plastic elbow, 90°
	X9099	spacer	13	X8222	screw
	X9116	drive pulley	13	X8212	
	X9118				washe
	X9015	screw	15	X8213	nu
		motor cover	16	72605A	space
	X9126	gasket, brush motor cove	17	X8289	screw
	X9015B	belt cove	18	PAS37	drain hose
			19	PAS36	plug, drain hose
SH	:		20	X8262	screw
	X9017	brush axle	21	X9071	gasket
	X9070	brush, 3" diameter x 18" chevron	22	X9033	small dome
	X9001	brush bearing	23	X9084	cover gasket
	X9117	brush driven pulle	24	X9080	recovery tank float cover
	X9018		25	PX46	nut, lock
		brush bearing spacer, nylon	25 26	X9142	SCREW
	X9019	brush bearing shield			
	X9020	brush thread guard	27	X9143	screw
	X9118	screw			
	X9115	washer	SOLUT	ON FITTING:	
			1	PX48	fitting, brass bulkhead
JTR	OL PANEL:		2	72274A	washer
	X9043	housing, cover, blue	3	71495A	pump protection filter
	X9008	push button switch	4	7AT017	barb, beaded
	X9007	rocker switch	5	70079C	hose, 1/2" wire reinforced clamp, 1/2" worm gear
	72086A	circuit breaker, 2.5 amp	6	7DL008	clamp, 1/2" worm gear
	X8008P	strain relief, plastic	VACUU	M SHOE:	
	72315A	power cord	1	X9009	vacuum shoe, aluminum
	X9093	label, 3-hole switch panel	1	X9013	vacuum shoe tub
	X9094	label, 3-hole switch panel - models w/heater	2 3	X9014	
	PD8	strain relief			hinge
	M1409	14/8, 600 volts cord	4	X8222	scre
	X8008N	nut, lock	5	7CM007	washer
	72049A		6 7	PX6	1/4 x 1/4 female quick disconnect brass fittin
		spring clip		7AT003	hosebarb fitting
	71651A	screw	8	7DL003	clamp, 1/4" worm gear
	X9135	screw	9	X9096	flip door hinge w/ spring assembly
	7DN004	nut cap	10	X9097	gasket, flip door
	7CM003	washer	11	7BH004	screw
			12	7CL002	washer
lifc	DLD:			X8282	bolt
	X9021	spray manifold	13		
	X9141	miniature nozzle bod	14	X8209	screw
	X9139		15	7CY002	washer
	7AK003	miniature nozzle tip	16	7CN001	nut
		elbow, union			
	PC66	fitting, brass, 1/8 nptm x 1/4 hose bar	SOLUT	ON TANK:	
		hose, solution	1	X9042	housing, solution, blue
	X8542		2 3	7BS002	screw
	7DL003	clamp	1	X8256	nut
		clamp washer, nylon	3		
	7DL003		$\frac{3}{4}$		28" chain
	7DL003 X8293	washer, nylon	4	X9144	28" chain lid solution tank
1P -	7DL003 X8293 7CM007	washer, nylon	<u>4</u> 5	X9144 X9081	lid, solution tank
IP, 1	7DL003 X8293 7CM007 100 PSI:	washer, nylon washer	4	X9144 X9081 X8235	lid, solution tank washer
1P, 1	7DL003 X8293 7CM007 100 PSI: SF814	washer, nylon washer 100 p.s.i. Shurflo pump, 115V	4 5 6 7	X9144 X9081 X8235 X8209	lid, solution tank washer screw
1P, 1	7DL003 X8293 7CM007 100 PSI: \$F814 FJ2002	washer, nylon washer 100 p.s.i. Shurflo pump, 115V 100 p.s.i. Shurflo pump - for 220V models only	4 5 6 7	X9144 X9081 X8235 X8209 X9086	lid, solution tank washer screw bracket, tank mount
1P, 1	7DL003 X8293 7CM007 100 PSI: \$F814 FJ2002 71507A	washer, nylon washer 100 p.s.i. Shurflo pump, 115V 100 p.s.i. Shurflo pump - for 220V models only elbow, 1/2h - 3/8 mpt, 90°	4 5 6 7 8 9	X9144 X9081 X8235 X8209 X9086 X9085	lid, solution tank washer screw bracket, tank mount bracket, tank mountin
1P, 1	7DL003 X8293 7CM007 100 PSI: \$F814 FJ2002 71507A PC20	washer, nylon washer 100 p.s.i. Shurflo pump, 115V 100 p.s.i. Shurflo pump - for 220V models only elbow, 1/2h - 3/8 mpt, 90° reducer, 3/8" male x 1/4" female	<u>4</u> 5	X9144 X9081 X8235 X8209 X9086	lid, solution tank washer screw bracket, tank mount
1P, 1	7DL003 X8293 7CM007 100 PSI: \$F814 FJ2002 71507A	washer, nylon washer 100 p.s.i. Shurflo pump, 115V 100 p.s.i. Shurflo pump - for 220V models only elbow, 1/2h - 3/8 mpt, 90°	4 5 6 7 8 9	X9144 X9081 X8235 X8209 X9086 X9085	lid, solution tank washer screw bracket, tank mount bracket, tank mountin
1P, ⁻	7DL003 X8293 7CM007 100 PSI: \$F814 FJ2002 71507A PC20	washer, nylon washer 100 p.s.i. Shurflo pump, 115V 100 p.s.i. Shurflo pump - for 220V models only elbow, 1/2h - 3/8 mpt, 90° reducer, 3/8" male x 1/4" female fitting, brass, 1/4" close nipple	4 5 6 7 8 9 10 11	X9144 X9081 X8235 X8209 X9086 X9085 X9125 X8400A	lid, solution tank washer screw bracket, tank mount bracket, tank mountin label, tank capacit Powr-Flite label
IP, -	7DL003 X8293 7CM007 100 PSI: 5F814 FJ2002 71507A PC20 PX32 7AV001	washer, nylon washer 100 p.s.i. Shurflo pump, 115V 100 p.s.i. Shurflo pump - for 220V models only elbow, 1/2h - 3/8 mpt, 90° reducer, 3/8" male x 1/4" female fitting, brass, 1/4" close nipple 1/4 female tee	4 5 6 7 8 9 10 11 11 11	X9144 X9081 X8235 X8209 X9086 X9085 X9125 X8400A X9012	lid, solution tank washer screw bracket, tank mount bracket, tank mountin label, tank capacit Powr-Fite label main chassis
IP, 1	7DL003 X8293 7CM007 100 PSI: \$F814 FJ2002 71507A PC20 PX32 7AV001 \$W132	washer, nylon washer 100 p.s.i. Shurflo pump, 115V 100 p.s.i. Shurflo pump - for 220V models only elbow, 1/2h - 3/8 mpt, 90° reducer, 3/8" male x 1/4" female fitting, brass, 1/4" close nipple 1/4 female tee solenoid, 120V, 250 p.s.i.	4 5 6 7 9 10 11 13	X9144 X9081 X8235 X8209 X9086 X9085 X9125 X8400A X9012 X9066	lid, solution tank washer screw bracket, tank mount bracket, tank mountin label, tank capacit Powr-Flite label main chassis wheel, blac
1P, 1	7DL003 X8293 7CM007 100 PSI: SF814 FJ2002 71507A PC20 PX32 7AV001 SW132 SW132-5	washer, nylon washer 100 p.s.i. Shurflo pump, 115V 100 p.s.i. Shurflo pump - for 220V models only elbow, 1/2h - 3/8 mpt, 90° reducer, 3/8" male x 1/4" female fitting, brass, 1/4" close nipple 1/4 female tee solenoid, 120V, 250 p.s.i. solenoid, 220V, 400 p.s.i for 220v models	4 5 6 7 8 9 10 11 11 13 13 14	X9144 X9081 X8235 X8209 X9086 X9085 X9125 X8400A X9012 X9012 X9066 X8020	lid, solution tank washer screw bracket, tank mount bracket, tank mountin label, tank capacit Powr-Filte label main chassis wheel, blac washer, countersunk axle
1P, 1	7DL003 X8293 7CM007 100 PSI: \$F814 FJ2002 71507A PC20 PX32 7AV001 \$W132 \$W132-5 PC45	washer, nylon washer 100 p.s.i. Shurflo pump, 115V 100 p.s.i. Shurflo pump - for 220V models only elbow, 1/2h - 3/8 mpt, 90° reducer, 3/8" male x 1/4" female fitting, brass, 1/4" close nipple 1/4 female tee solenoid, 120V, 250 p.s.i. solenoid, 120V, 250 p.s.i for 220v models 1/8" close nipple	4 5 6 7 8 9 10 11 13 13 14 14 15	X9144 X9081 X8235 X8209 X9086 X9085 X9125 X8400A X9012 X9066 X8020 X8265	lid, solution tank washer screw bracket, tank mount bracket, tank mountin label, tank capacit Powr-Filte label main chassis wheel, blac washer, countersunk axle screw
1P, ⁻	7DL003 X8293 7CM007 100 PSI: \$F814 FJ2002 71507A PC20 PX32 7AV001 \$W132 \$W132 \$W1325 PC45 7AG002	washer, nylon washer 100 p.s.i. Shurflo pump, 115V 100 p.s.i. Shurflo pump - for 220V models only elbow, 1/2h - 3/8 mpt, 90° reducer, 3/8" male x 1/4" female fitting, brass, 1/4" close nipple 1/4 female tee solenoid, 120V, 250 p.s.i. solenoid, 120V, 250 p.s.i. solenoid, 220V, 400 p.s.i for 220v models 1/8" close nipple bushing	4 5 6 7 8 9 10 11 13 13 14 13 15 15 16	X9144 X9081 X8235 X8209 X9086 X9085 X9125 X8400A X9012 X9066 X8020 X8265 X9109	lid, solution tank washer screw bracket, tank mount bracket, tank mountin label, tank capacit Powr-Flite label main chassis wheel, blac washer, countersunk axle screw grommet
IP,	7DL003 X8293 7CM007 100 PSI: \$F814 FJ2002 71507A PC20 PX32 7AV001 \$W132 \$W132-5 PC45	washer, nylon washer 100 p.s.i. Shurflo pump, 115V 100 p.s.i. Shurflo pump - for 220V models only elbow, 1/2h - 3/8 mpt, 90° reducer, 3/8" male x 1/4" female fitting, brass, 1/4" close nipple 1/4 female tee solenoid, 120V, 250 p.s.i. solenoid, 120V, 250 p.s.i for 220v models 1/8" close nipple	4 5 6 7 8 9 10 11 13 13 14 13 15 15 16	X9144 X9081 X8235 X8209 X9086 X9085 X9125 X8400A X9012 X9066 X8020 X8265	lid, solution tank washer screw bracket, tank mount bracket, tank mountin label, tank capacit Powr-Filte label main chassis wheel, blac washer, countersunk axle screw

Motors not running

i i i i i i i i i i i i i i i i i i i	
 CAUSE: 1) Power not reaching main switch. 2) Defective power cord. 3) Faulty switches or wiring. 4) Blown fuse or tripped circuit breaker 5) Problem with brushes, field windings, or armatures. (vacuum or brush motor) 	 SOLUTION: 1) Check power supply. Check fuses/circuit breaker. Contact service center. 2) Replace with 14 guage cord. 3) Contact manufacturer or service center. 4) Reset circuit breaker according to operating instructions or replace fuse if qualified 5) Contact manufacturer or service center.
Loss of vacuum suction	
CAUSE: 1) Vacuum head blocked. 2) Hoses blocked. 3) Recovery tank not sealed properly.	 SOLUTION: 1) Visually inspect and clear blockage. 2) Visually inspect and clear blockage. 3) Check tank for damage or adjust lid for proper fit.
Brush not functioning properly	
CAUSE: 1) Belt broken. 2) Brush jammed. 3) Clutch bearing seized.	SOLUTION: 1) Replace belt. 2) Visually inspect and clear blockage. 3) Contact manufacturer or service center.
Spray jet not functioning properly	
CAUSE: 1) Jet blocked. 2) Solution filter blocked. 3) Pump head, valves or diaphram blocked or damaged.	 SOLUTION: 1) Visually inspect and clean according to operating instructions. 2) Visually inspect and clean according to operating instructions. 3) Contact manufacturer or service center.
4) Solenoid valve inoperative	4) Contact manufacturer or service center.
Value Assurance Package, and maintained in accordance with	WARRANTY original purchaser that products manufactured are free material, provided such goods are installed, operated written manuals or other instructions for a period of rts and workmanship. In case you as our customer,

5 YEARS on One Piece Housing

2 YEARS on Brush Motor **1** YEAR on Parts & Our Workmanship and maintained in accordance with written manuals or other instructions for a period of 1 year from date of purchase on parts and workmanship. In case you as our customer, meet any trouble with your machine, contact your Powr-Flite® representative who will be happy to be of service to you and will take care of the warranty settlement.

NOTE: Alterations and changes made to the machine without written approval of the manufacturer and use of unapproved spare parts will not be covered by warranty.