

Critical Filtration Vacuums



# IPC Eagle

## DustPro

Operations and Parts Manual



Models:

S9DUSTPRO

S9DUSTPRO-WD



## IMPORTANT SAFETY INSTRUCTIONS

When using an electrical appliance, basic precaution must always be followed, including the following:

### READ ALL INSTRUCTIONS BEFORE USING THIS MACHINE.

This machine is for commercial use.

## WARNING



**DANGER:** Failure to read and observe all DANGER statements could result in severe bodily injury or death. Read and observe all DANGER statements found in your Owner's Manual and on your machine.



**WARNING:** Failure to read and observe all WARNING statements could result in injury to you or to other personnel; property damage could occur as well. Read and observe all WARNING statements found in your Owner's Manual and on your machine.



**CAUTION:** Failure to read and observe all CAUTION statements could result in damage to the machine or to other property. Read and observe all CAUTION statements found in your Owner's Manual and your machine.

---



**DANGER:** Failure to read the Owner's Manual prior to operating or attempting any service or maintenance procedure to your machine could result in injury to you or to other personnel; damage to the machine or to other property could result as well. You must have training in the operation of this machine before using it. If you or your operator(s) cannot read English, have this manual explained fully before attempting to operate this machine.



**DANGER:** Operating a machine that is not completely or fully assembled could result in injury or property damage. Do not operate this machine until it is completely assembled. Inspect the machine carefully before operation. Use only as described in this manual. Use only the manufacturer's recommended attachments.



**DANGER:** Machines can cause an explosion when operated near flammable materials and vapors. Do not use this machine with or near fuels, grain dust, solvents, thinners, or other flammable materials.



**DANGER:** Do not pick up flammable fluids, dust or vapors.



**DANGER:** Do not vacuum anything that is burning or smoking, such as cigarettes, matches, or hot ashes.



**DANGER:** This machine **is** suitable for picking up health endangering dust such as lead paint.



**DANGER:** Using a machine with a damaged power cord could result in an electrocution. Do not use the machine if the power cord is damaged. Do not use the electrical cord to move the machine. Keep cord away from heated surfaces. Do not unplug by pulling on the cord; grasp the plug, not the cord. Turn off all controls before unplugging. Do not close a door on cord or pull around sharp edges or corners.



**DANGER:** Electrocution could occur if maintenance and repairs are performed on a unit that is not properly disconnected from the power source. Disconnect the power supply before attempting any maintenance or service.



**Warning:** Operating a machine without observing all labels, decals, etc., could result in injury or damage. Read all machine labels before attempting to operate the machine. Make sure all of the labels are attached or fastened to the machine. Get replacement labels and decals from the manufacturer's distributor.



**Warning:** Electrical components can "short-out" if exposed to water or moisture. Keep the electrical components of the machine dry. Always store the machine in a dry area.



**Warning:** Use of this machine to move other objects or to climb on could result in injury to the operator or damage to the machine. Do not use this machine as a step or furniture. Do not allow to be used as a toy. Close attention is necessary when used by or near children.



**Warning:** Moving parts of this machine can cause injury and/or damage. Keep hands, feet, loose clothing, hair, fingers, and all parts of the body away from openings and moving parts.



**Warning:** Electrocution could occur if you handle the plug or appliance with wet hands. Do not handle plug or appliance with wet hands.



**Warning:** Do not use without dust bag and or filters in place.



**Warning:** Rotating fan blades inside the cover. Before opening cover, switch off machine. Wait until the fan/brush stops completely or dust and debris may be ejected.



**Warning:** If the machine is not working properly, has been dropped, damaged, left outdoors, or dropped into water, return it to an Authorized service center.



**Warning:** Damage could occur to machine if openings are blocked. Do not put any object into openings. Do not use any opening blocked: keep free of dust, lint, hair, and anything that may reduce air flow.



**Warning:** Injury could occur to the operator or the machine if used without the dust bag and/or filters in place. Do not use the machine without the dust bag and/or filters in place.



**Warning:** Injury to the operator and/or damage to the machine could occur when cleaning on stairs, unless caution is used. Use extreme caution when cleaning on stairs.




**Warning:** To reduce the risk of electrical shock, always use a 3-wire electrical system connected to the electrical ground. Whenever possible connect the machine to an outlet protected by a ground fault interrupter (GFI). See "Grounding Instructions."


**SAVE THESE INSTRUCTIONS**

## 120 Volt Machine Instructions For Connection To The Power Supply And The Electrical Ground

This machine must be connected to the electrical ground to protect the operator from electrical shock. The machine has an approved power cord with three conductors and a plug with three terminals. Connect the plug to a receptacle that has three holes and is connected to the electrical ground. The green (or green and yellow) conductor in the cord is the ground wire. Never connect this wire to any terminal other than the ground terminal.

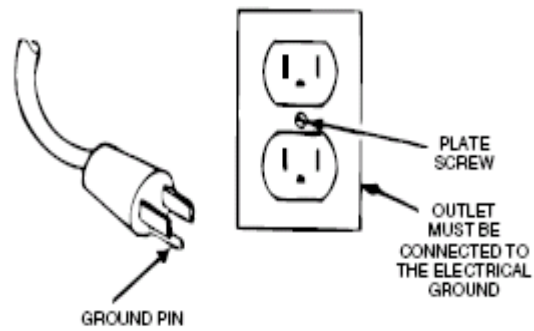

This machine uses a 120 volt AC 60 cycle electrical circuit. Make sure you have the correct frequency and voltage before connecting the power cord to an outlet. The machine has a plug as shown in Figure 1. If a receptacle connected to the electrical ground as shown in Figure 1 is not available, have one installed by an electrical contractor. **Do not use an adapter.**

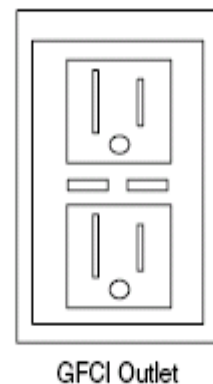

**Warning:** To reduce the risk of electrical shock, protect the machine from rain. Keep the machine in a dry area.



**Warning:** To reduce the risk of electrical shock, always use a 3-wire electrical system connected to the electrical ground. Whenever possible connect the machine to an outlet protected by a ground fault interrupter (GFCI).



**Warning:** Do not cut, remove or break the ground pin. If the outlet does not fit the plug, consult your electrical contractor.



**Warning:** Have worn, cut or damaged cords and plugs replaced by an authorized service person.



**Warning:** If it becomes necessary to use an extension cord to reach an electrical outlet, you must use one that is at least one size larger in wire size. Such as a power cord that is marked 12/3 would need to use an extension cord that is marked 10/3. Do not use an extension cord that is undersized.

## IMPORTANT INSTRUCTIONS

---

- Before use the equipment must be correctly assembled with all of its components
- Check that the electrical outlet is correct for use with the plug on the machine
- Before connecting, check that the specified motor voltage corresponds to the main voltage available
- Never use the equipment near flammable, explosive or toxic substances: sparks from the motor could cause dangerous reactions.
- Always unplug the machine from the electrical outlet when leaving machine unattended or before attempting any repair.
- Service and repair should be done by qualified personnel only. Use only original manufacturer's replacement parts.

### Operation

---

**This machine is a commercial vacuum designed for dry pick up only. And must be stored in a dry location. (S9DUSTPRO)**

1. Attach paper bag to tank inlet deflector. See Figure 1.
2. Ensure that the cartridge filter is securely attached to the bottom of the vacuum head. See Figure 2.
3. Place vacuum head onto the tank and secure it with the two clamps.
4. Insert hose into the tank inlet until it locks in place. See Figure 3.
5. Attach appropriate cleaning tool. For optional power brush attachment, see Power Head and Wand Assembly.
6. Activate the vacuum by pressing the switch on the vacuum head.



Figure 1



Figure 2



Figure 3

### After Use

---

1. Store the cord on the hook.
2. Store the appliance indoors, away from sources of heat.
3. This appliance is provided with an automatically reset thermal limiter to avoid damage to motor. If thermal limiter operates do one or more of the following:
  - Change the bag
  - Clean or replace the cartridge filter
  - Check hose and tank inlet for any obstructions
  - Wait a few minutes for the thermal limiter to re-close the circuit

## IMPORTANT INSTRUCTIONS

---

- Before use the equipment must be correctly assembled with all of its components
- Check that the electrical outlet is correct for use with the plug on the machine
- Before connecting, check that the specified motor voltage corresponds to the main voltage available
- Never use the equipment near flammable, explosive or toxic substances: sparks from the motor could cause dangerous reactions.
- Always unplug the machine from the electrical outlet when leaving machine unattended or before attempting any repair.
- Service and repair should be done by qualified personnel only. Use only original manufacturer's replacement parts.

### Operation

---

**This machine is a commercial vacuum designed for dry or wet pick up . And must be stored in a dry location. (S9DUSTPRO-WD)**

1. For dry use, attach paper bag to tank inlet deflector.  
See Figure 1.
2. For Wet use, remove the paper bag from inlet deflector.
3. Ensure that the cartridge filter is securely attached to the bottom of the vacuum head. See Figure 2.
4. Place vacuum head onto the tank and secure it with the two clamps.
5. Insert hose into the tank inlet until it locks in place. See Figure 3.
6. Attach appropriate cleaning tool. For optional power brush attachment, see Power Head and Wand Assembly.
7. Activate the vacuum by pressing the switch on the vacuum head.



Figure 1



Figure 2



Figure 3

### After Use

---

1. Store the cord on the hook.
2. Store the appliance indoors, away from sources of heat.
3. This appliance is provided with an automatically reset thermal limiter to avoid damage to motor. If thermal limiter operates do one or more of the following:
  - Change the bag
  - Clean or replace the cartridge filter
  - Check hose and tank inlet for any obstructions
  - Wait a few minutes for the thermal limiter to re-close the circuit

## Power Head and Wand Assembly Instructions

---

1. Slide on the two collars as pictured. See Figure 1
2. Insert wand into the power head neck until it stops. Slide the small collar into the neck of the power head. Screw the large collar onto the power head until tight. See Figure 2
3. Firmly press the two wands together.
4. Firmly press the upper bent wand into the straight wand.
5. Attach two cord hangers to wand and cord. See Figure 3
6. Evenly attach 3 cord hangers to the hose and cord.
7. Plug power head into the power head receptacle. See Figure 4



Figure 1



Figure 2



Figure 3



Figure 4



## Auto Start Tool Instructions

---

Both the DustPro & the DustPro-WD come with an auto start feature. This enables the vacuum to automatically start when a power tool that is plugged into the A.C. receptacle on the vacuum head is engaged. When the power switch is released on the tool the vacuum will run for approximately 7 seconds and then will turn itself off.

1. Plug desired power tool into A.C. receptacle on vacuum power head. See Figure 1
2. Connect vacuum hose to power tool discharge port.
3. Depress power switch on vacuum to the II position. See Figure 2
4. Engage on-off switch on power tool.
5. Release on-off switch on power tool, vacuum will continue to run for approximately 7 seconds.
6. Vacuum can also be operated in a conventional manner by depressing the power switch on the vacuum to the I position. See Figure 2



Figure 1



Figure 2


---

## Periodic Maintenance

---

### (Every six to twelve months)

1. Check filter for wear, replace dirt saturated filters that do not respond to normal cleaning.
2. Inspect gasket seals and replace those which have begun to leak.
3. Examine carbon motor brushes and commutator.

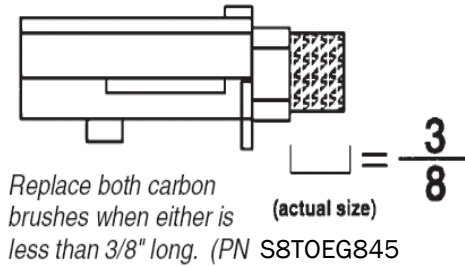

---

## Servicing The Filter

---

The filter is accessed by lifting the head assembly off the tank.

The Polyester filter assembly is easily removed by simply sliding the filter off of the HEPA cartridge filter.

The cartridge filters are removed very easily. First remove the filter retainer by removing the 2 hold down screws. Remove the Filter hold down bracket. The cartridge filter will then slide off of the support assembly.

### Note:

- Be sure to frequently clean the filters.
- Allow filters to thoroughly air dry after washing them before returning them to the machine.
- Worn filters can affect vacuum performance. Replace the filters when they become worn out and normal cleaning will not restore vacuum performance.

---

## Servicing The Vac Motor

---

### Motor Replacement

1. Disconnect power cord from power source.
2. To access the vac motor, remove the screws that attach the main cover to the head assembly and set the cover to one side.
3. Disconnect the motor's 2 red lead wires from the main wiring bridge.
4. Disconnect green/yellow wire by removing the screw from the motor core.
5. Remove the four motor mounting screws.
6. Remove motor plate and set aside.
7. Take out the motor and remove the upper and lower gaskets.
8. Inspect gaskets. If they show signs of wear replace the.
9. Install gaskets onto new motor ensuring that they are properly seated.
10. Install the new motor. Make sure foam mufflers are positioned properly.
11. Attach motor plate to motor.
12. Connect green/yellow wire to motor core.
13. Connect motor's 2 red lead wires to main wiring bridge.
14. Re-assemble vac cover.
15. Test for proper operation.

## Servicing The Vac Motor

---

### Carbon Brush Replacement

(Replacement Carbon Brushes: Part# S8TOEG845)

1. Disconnect power cord from power source.
2. To access the vac motor, remove the screws that attach the main cover to the head assembly and set the cover to one side.
3. Remove the screws that attach the inner cover to the head assembly and set aside.
4. Remove the carbon brush assembly by removing the 2 screws that attach it to the vac motor. See Figure 1
5. Slide off the carbon brush connector from the motor terminal. See Figure 2
6. Inspect armature commutator. If it is extremely pitted, grooved or not concentric then the motor will need to be replaced or sent to a qualified service center.
7. Reverse steps 6 through 4 to install new carbon brush and housing.
8. Repeat steps 4 through 7 for the other carbon brush.
9. Reverse steps 3 and 2 for re-assembly.
10. Test for proper operation.

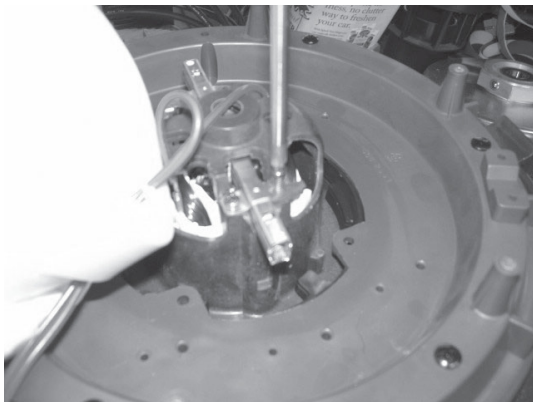


Figure 1


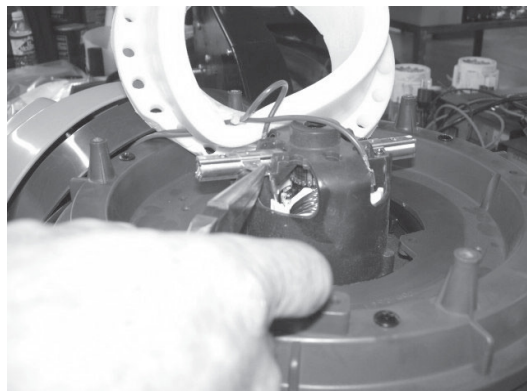


Figure 2


## Vacuum Motor Assembly S9DustPro & S9DustPro-WD

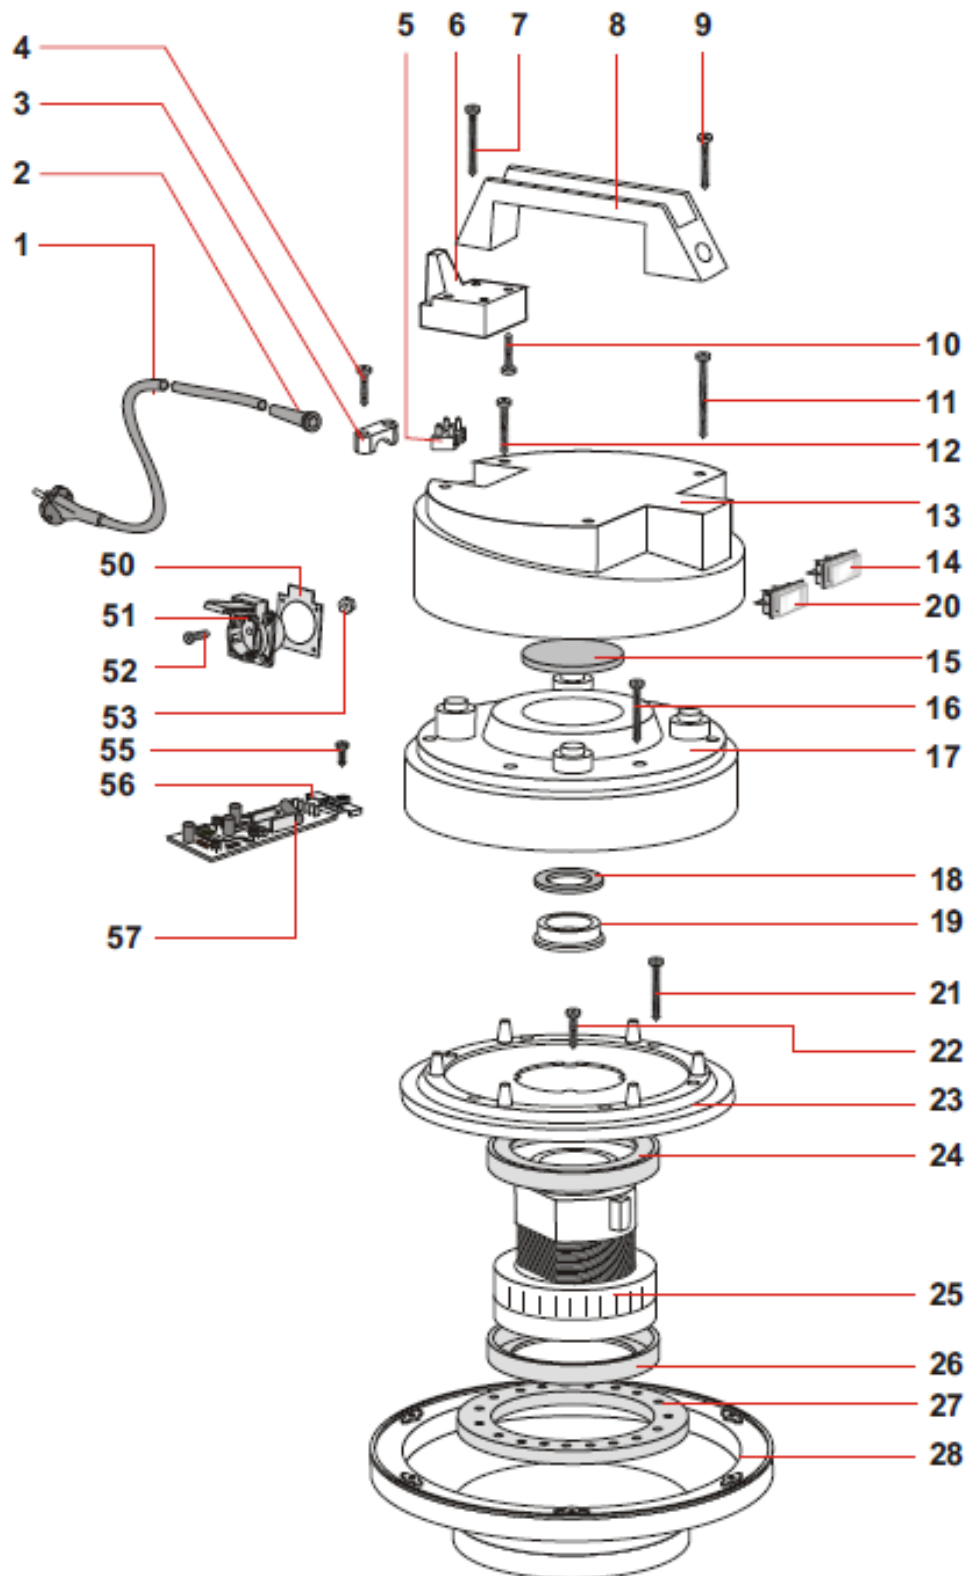

## Vacuum Motor Assembly S9DustPro & S9DustPro-WD


Item	Part#	Description	Qty.
1	T821802005	Power Cord 3x16 AWG	1
2	S80138	Strain Relief	1
3	S80139	Clamp, Cord	1
4	S81006	Screw, 5x20	2
5	S83444	Terminal Block	1
6	S82928AU	Cord Hook	1
7	S82627	Screw, 5x40	2
8	S82927	Handle	1
9	S81026	Screw, 5x30	1
10	S81006	Screw, 5x20	2
11	S81054	Screw, 5x50	2
12	S81026	Screw, 5x30	2
13	S82929	Cover	1
14	S80465/B	Switch	1
15	S83937	Filter, Cooling	1
16	S81050	Screw, 5x35	6
17	S82738-1AU	Cover, Motor	1
18	S83969	Gasket	1
19	S80310AU	Ring, Spacer	1
20	N/A	N/A	
21	S82627	Screw, 5x40	6
22	S81006	Screw, 5x20	4
23	S82591-1AU	Motor Support	1
24	S83901	Gasket	1
25	S81120S	Motor, 1000W, 120V/60Hz	1
26	S83901	Gasket	1
27	S83866	Foam, Noise Reduction	1
28	S81189G	Base with Gasket	1
50	S83453	Gasket, Receptacle	1
51	S86457	Receptacle, AC	1
52	S83603	Screw, 4x16	4
53	S81854	Nut, 4mm	4
55	S81006	Screw, 5x20	2
56	S86229	Hold down, Control Board	2
57	S87872	Auto Start Control Board	1

## Filter Assembly S9DustPro

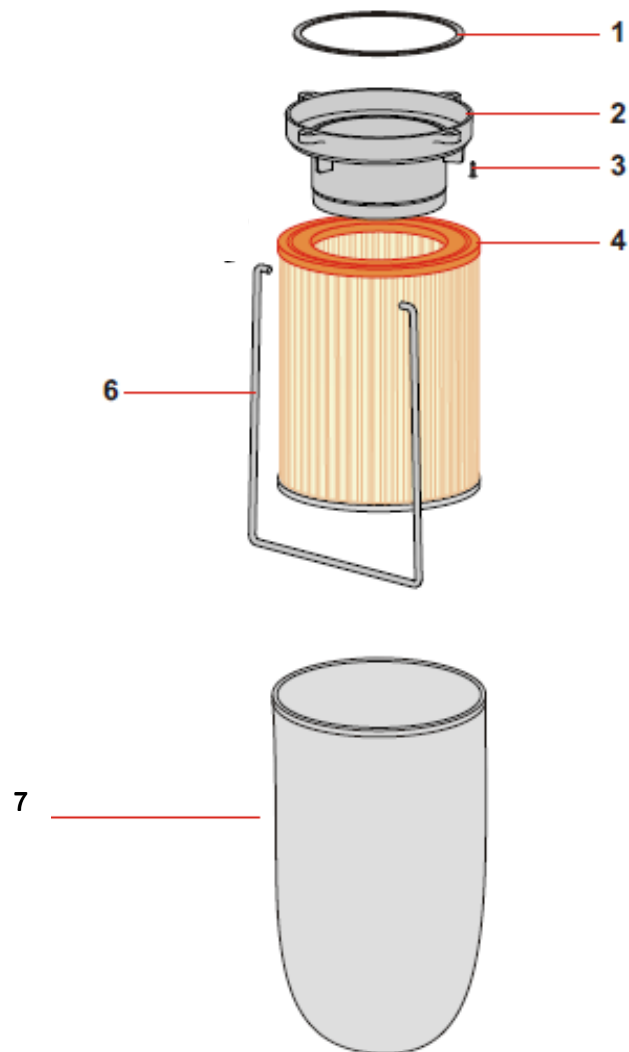

Item	Part#	Description	Qty.
1	S83735	Gasket	1
2	S807765-1	Support, Cartridge	1
3	S83156	Screw, 5x20	4
4	S87768	Filter, HEPA	1
6	S821036	Bracket, Filter	1
7	S821177	Pre-filter	1

## Tank Assembly S9DustPro

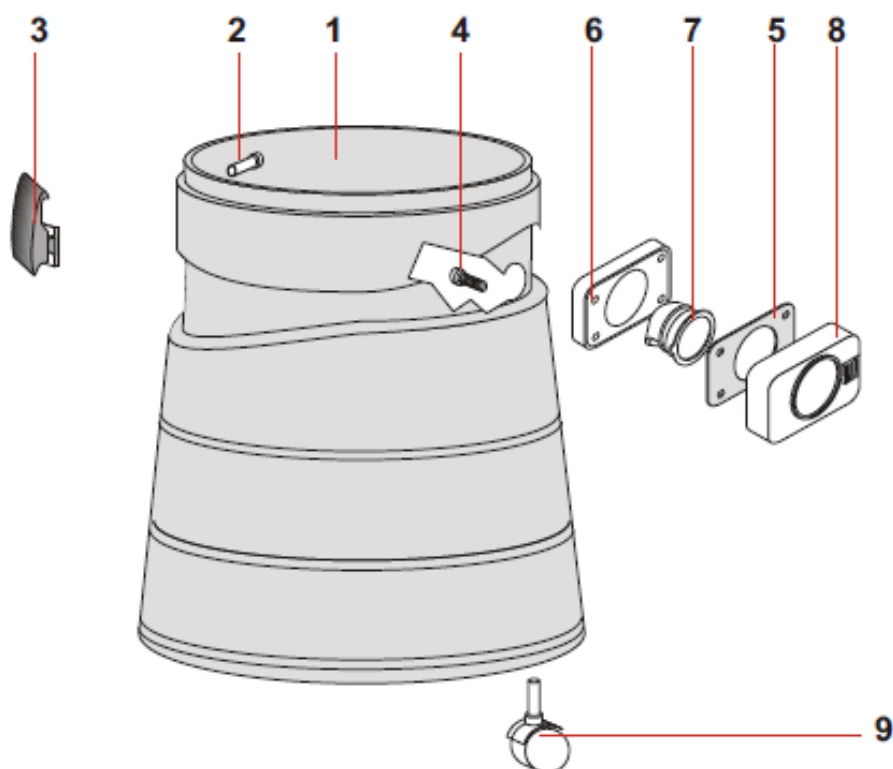

Item	Part#	Description	Qty.
1	S82599	Tank	1
2	S81300	Rivet 5x24.5	4
3	S81847	Clamp, Tank	2
4	S81050	Screw 5x35	4
5	S82846	Gasket, Inlet	1
6	S82586	Retainer, Tank	1
7	S82593	Deflector	1
8	S82652A	Inlet Cover	1
9	S80558	Caster	6

## Filter Assembly S9DustPro-WD



## Tank Assembly S9DustPro –WD

# Tools



1



2



3



4



5



6



7



8

Item	Part#	Description	Qty
1	S76388	Adapter	1
2	S70003	Crevice Tool	1
3	S76295	Round Brush	1
4	S70008	Hose	1
5	S76387	Wand, Straight	2
6	S76389	Wand, Curved	1
7	S76384	Floor Brush	1
8	S76385	Floor Squeegee (DustPro-WD)	1

## **Filters**

T80092	Paper Bags, 5/pkg.
S87768	HEPA Filter, Cartridge
S821177	Pre-Filter

## Warranty Policy

### **Limited Warranty**

IPC Eagle warrants new cleaning equipment against defects in material and workmanship under normal use and service to the original purchaser as detailed below.

#### **3 years**

Subject to the conditions stated below, IPC Eagle warrants all polyethylene tanks to be free from defects in materials and workmanship for a 3-year period. Parts replaced or repaired are warranted for the remainder of the original warranty period.

#### **1 year**

Subject to the conditions stated below, IPC Eagle warrants all other cleaning equipment components to be free from defects in materials and workmanship for a 1-year period. Parts replaced or repaired are warranted for the remainder of the original warranty period.

IPC Eagle will furnish and charge for replacement parts, including transportation, to the original owner through an IPC Eagle authorized service center. If the part is returned within 30 days and is found defective, the owner will be credited for the cost of the replacement part including shipping and handling.

Labor charges are covered for one year from the date of purchase if provided by an authorized IPC Eagle service center.

Wear items exempt from warranty include carbon brushes, power cords, wheels, handle grips, filters, screens, and squeegees.

This warranty shall not apply to failures caused by misuse or abuse, improper maintenance as stated in the operation manuals, use of unauthorized repair parts, repairs by other than an IPC Eagle authorized service center, and damage in transit.

IPC Eagle disclaims and denies any liability for any direct, indirect, special incidental or consequential damage which may be suffered as a result of sale, delivery, servicing, use, loss of any product, downtime, labor, freight, or other charges not expressly included herein.



**IPC Eagle**

2955 Lone Oak Drive • Eagan, MN 55121  
651.686.5399 • Fax: 651.686.5695  
[www.ipceagle.com](http://www.ipceagle.com)

IPC Eagle Corporation Sales and Service Provided by: